

STERILIZATION CENTER



Item #: ALSTR 06D-000-000






Cover Page	
Unpacking	I-(
Utilities Location	I-1
Base Cabinets	I-2
Achorbolt Layout Full Scale	I-3
Upper Cabinets	I-4
Countertop & Hardware	I-5
Final Assembly	I-6
Sales Drawing Render	S-(
Sales Drawing	S-:



Install - Unpacking

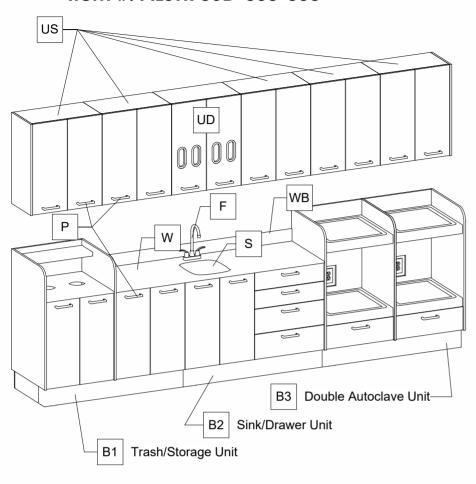

Packing List			
Mark	Description	Qty	
Cabine	try		
B1	Trash/Storage Unit	1	
B2	Sink/Drawer Unit	1	
В3	Double Autoclave Unit	1	
UD	Upper Dispense Cabinet	1	
US	Upper Cabinet	5	
W	Work Surface	1	
WB	Backsplash	1	
Hardwa	are	•	
	#12 3" Wood Screws	48	
	#14 1-1/4" Cabinet Screws	4	
	Sex/Sleeve Bolt	24	
	Wedge Anchor Bolts	6	
Р	Door/Drawer Pull	24	
Other			
	Strainer	1	
	Tube of Caulk	1	
F	Faucet	1	
S	Undermount Sink	1	


Skid A contains: Trash & Storage Cabinets pre-attached to each other and a Toe Kick.

Skid B contains: Sink & Drawer Cabinets pre-attached to each other and a Toe Kick.

Skid C contains: Double Autoclave Cabinets preattached to each other and a Toe Kick.

Skid D contains: All Wall cabinets, work surface and back splash.


- 1. Remove all packing material.
- 2. REMOVE HARDWARE PACK FROM SINK BASE ON **SKID B**.

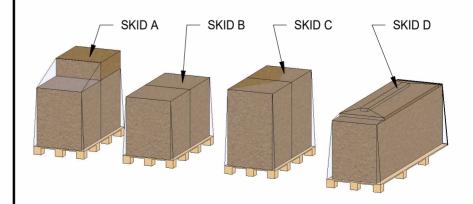

Install - Utilities Location

Backers				
Description	Length			
2x6 Backer	12' - 1 9/32"			
2x6 Backer	12' - 1 9/32"			
2x6 Backer	12' - 1 9/32"			
2x6 Backer	12' - 1 9/32"			
	48' - 5 3/32"			

Plumbing Utilities -by others-				
Mark	Description	Qty		
Н	Hot Water Supply	1		
С	Cold Water Supply	1		
D	Sanitary DWV	1		

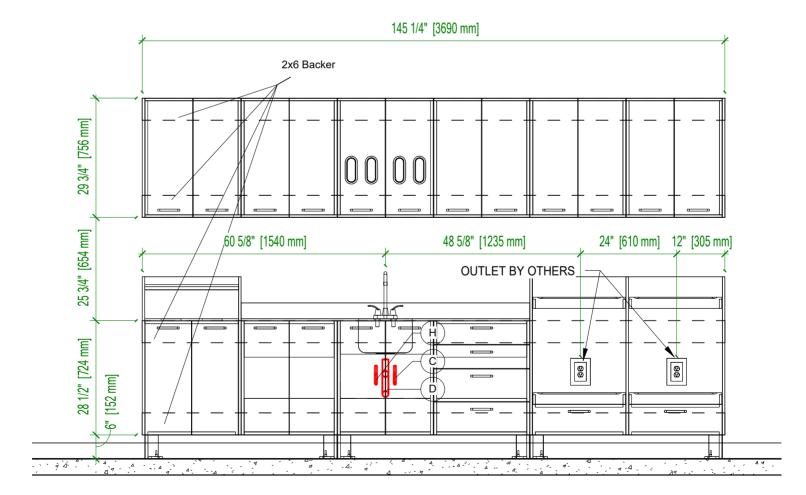

INSTALL TOE KICK ASSEMBLIES


1. Using Template **<u>Drawing I-3t</u>**, Drill anchor bolt holes (3/8" dia x 2" min) into floor as the designated locations (shown in BLUE).


Note: Toe kick leveling glides can be adjusted (top-down access) with flat head or 7/32 socket. ALL LEVELING GLIDES ARE PRE-INSTALLED ON TOE KICKS


2. Place anchors through toe kick into drilled holes for all toe kick sections. [Detail A]


Note: Do not secure anchors to allow movement until final assembly/leveling is completed

- 3. Attach to B2 to B1 with sex/sleeve bolt set (4) [DETAIL SSB]
- 4. Attach to B2 to B3 with #14 x 1-1/4" screw set (4) **[DETAIL CTC]**
- 5. Attach to solid wall blocking/studs with #12-3" wood screws. **[DETAIL CWS]**




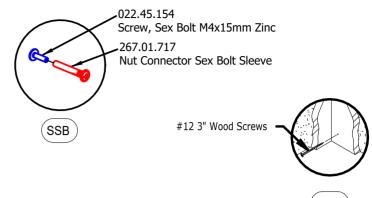

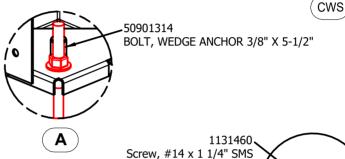


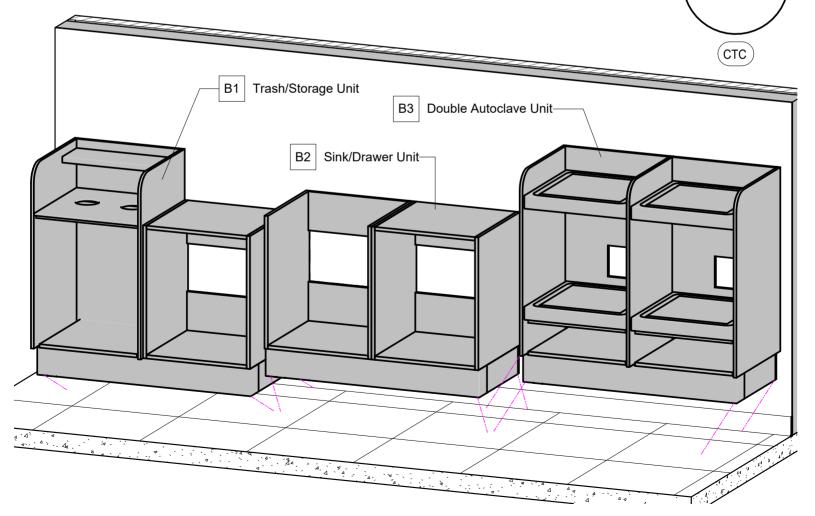




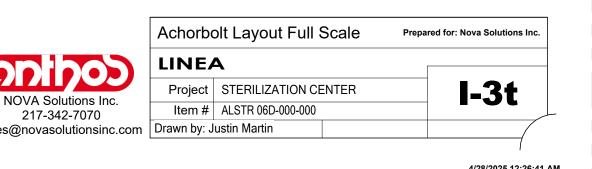

Install - Upper Cabinets

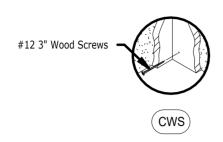


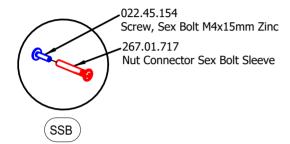

INSTALL BASE CABINET


- 1. Remove all doors & drawers.

 Doors/drawers are matching/coordinated sets. Keep track of where each was removed. Doors & drawers must be reinstalled in same configuration at end of assembly.
- 2. Place left most wall cabinet on wall as shown and attach to solid wall blocking/studs with #12-3" wood screws. **[DETAIL CWS]**
- 3. Repeat for remainder for remiander of wall cabinets as shown and connecting them to each other with sex/sleev bolt set **[DETAIL SSB]**

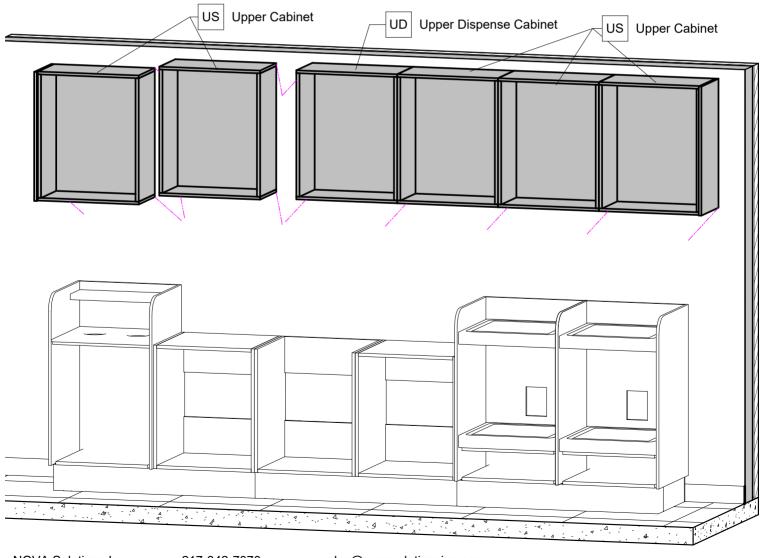


LINEA

Install - Countertop & Hardware

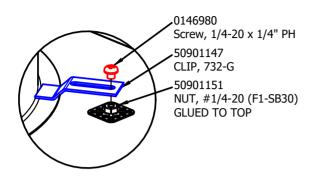

INSTALL COUNTERTOP TO SINK BASE CABINET

- 1. Install Sink, Faucet, Strainer.
 - **Apply provided silicone to the sink prior to installing**
- 2. Place Countertops on respective base cabinets.
 - **Apply provided silicone to secure work surface to base cabinet**
- **NOTE: FINAL PLUMBING CONNECTIONS BY OTHERS**

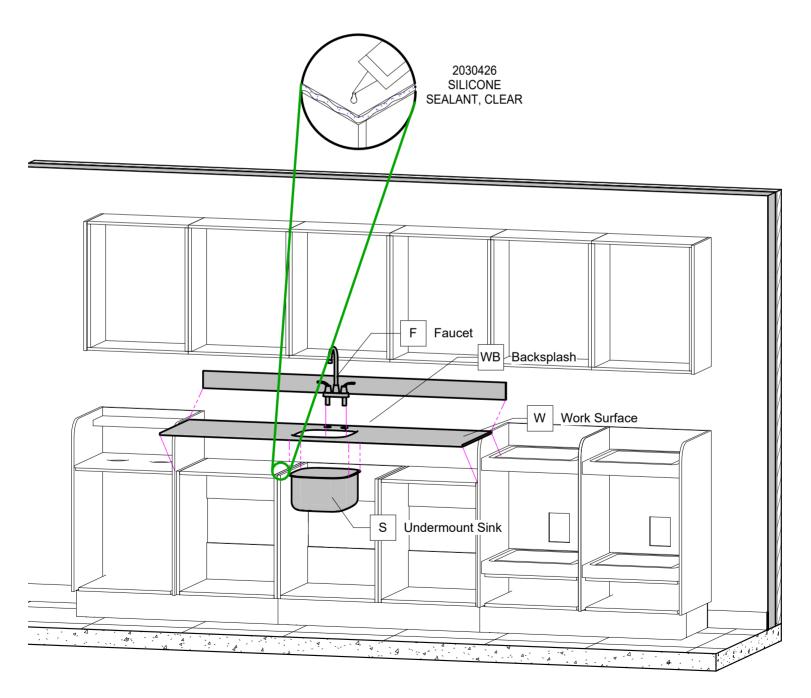

NOVA Solutions Inc.

217-342-7070


sales@novasolutionsinc.com



Install - Final Assembly

NOTE: FINAL ELECTRICAL & PLUMBING CONNECTIONS BY OTHERS

- 1. REINSTALL DOORS/DRAWERS IN ORIGINAL POSITIONS FROM WHERE THEY WERE REMOVED.
- 2. Attach Door/Drawer Pulls and remaining components as needed.
- 3. ADJUST TOE-KICK LEVELERS AND TIGHTEN ANCHOR NUTS.
- 4. CHECK FOR ALIGNMENT OF DOORS & DRAWERS, FINAL ADJUSTMENTS MAY BE NECCESSARY.

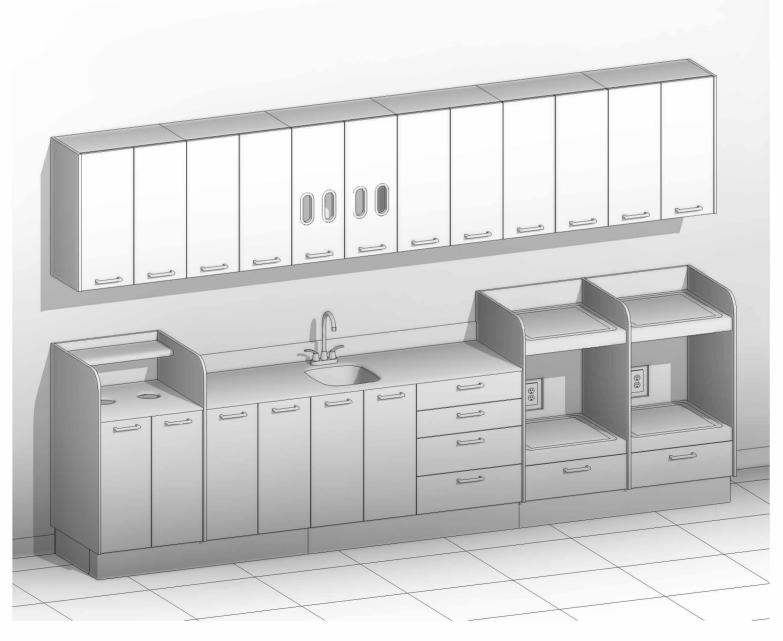

NOVA Solutions Inc.

217-342-7070

sales@novasolutionsinc.com