


## Install - Cover Page

Cover Page	]
Unpacking	I-C
Utilities Location	I-1
Toe Kicks	I-3
Achorbolt Layout Full Scale	I-3
Base Cabinets	I-4
Upper Cabinets	I-5
Countertop & Hardware	I-6
Final Assembly	I-7

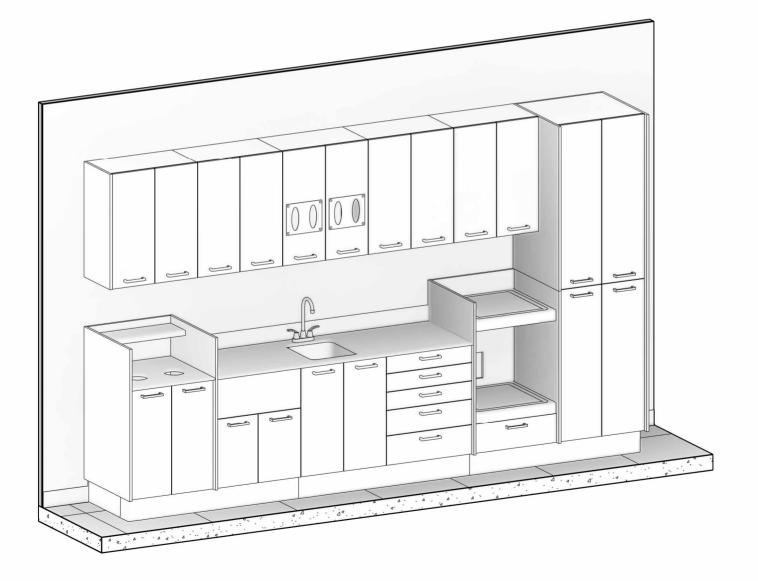

**Skid 1** contains: Upper Cabinets, Main Countertop, Back Splash, Trash Countertop


**Skid 2** contains: Lower Base Cabinets, Hardware Pack (in sink box), Toe Kick Assemblies

Skid 3 contains: Trash Cabinet, Autoclave Cabinet

Skid 4 contains: Tall Storage Cab

1. Remove all packing materials and carefully inspect the product for any damages.

2. REMOVE HARDWARE PACK FROM SINK BASE ON SKID 2.

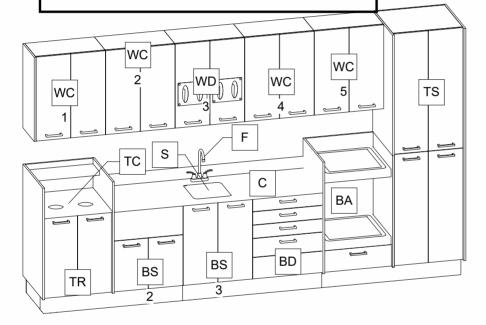


### Install - Unpacking

Packing List			
Mark	Description	Qty	
Cabine	try		
BA	AutoClave	1	
BD	Base Drawer Cabinet	1	
BS	Base Cabinet	1	
BS	Base Sink Cabinet	1	
TC	Trash Countertop	2	
TK	48" Toe Kick (Steri)	3	
TR	Base Trash Cabinet	1	
TS	Tall Storage Cabinet	1	
WC	Upper Storage Cabinet	4	
WD	Upper Dispense Cabinet	1	
Hardwa	are		
	#10-24 X 1 1/2" Self Drilling Screw	24	
	#14 1-1/4" Cabinet Screws	16	
	Sex/Sleeve Bolt	18	
	Wedge Anchor Bolts	6	
Р	Door/Drawer Pull	26	
Other			
	Strainer	1	
	Tube of Caulk	1	
С	Solid Surface w/ Sink cutout	1	
F	Faucet	1	

S

Undermount Sink

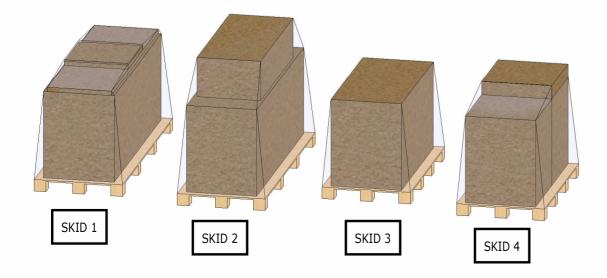

iiem	₩.	ALSIK	0013	<b>o</b>	

Plumbing Utilities -by others-			
Mark	Description	Qty	
Н	Hot Water Supply	1	
С	Cold Water Supply	1	
D	Sanitary DWV	1	


Backers		
Description	Length	
2x6 Backer	12' - 0 5/8"	
2x6 Backer	12' - 0 5/8"	
2x6 Backer	12' - 0 5/8"	
2x6 Backer	12' - 0 5/8"	

48' - 2 1/2"

### Install - Utilities Location

#### **BACKERS AND UTILITIES**


Recommend installing wood backers as shown, although it is not required. If no backers are available, be sure to attach cabinets solid wood studs.

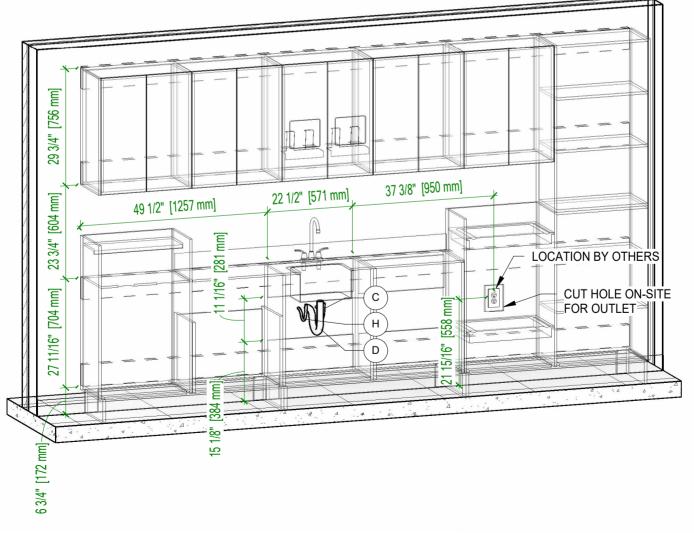

NOVA Solutions Inc.

217-342-7070

Install - Toe Kicks

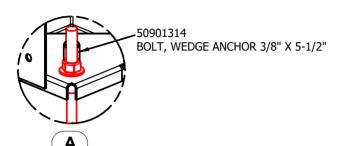


#### **INSTALL TOE KICK ASSEMBLIES**

1. Using Template **<u>Drawing I-3t</u>**, Drill anchor bolt holes (3/8" dia x 2" min) into floor as the designated locations (shown in BLUE).

Note: Toe kick leveling glides can be adjusted (top-down access) with flat head or 7/32 socket. ALL LEVELING GLIDES ARE PRE-INSTALLED ON TOE KICKS


2. Place anchors through toe kick into drilled holes for all toe kick sections. [Detail A]

Note: Do not secure anchors to allow movement until final assembly/leveling is completed

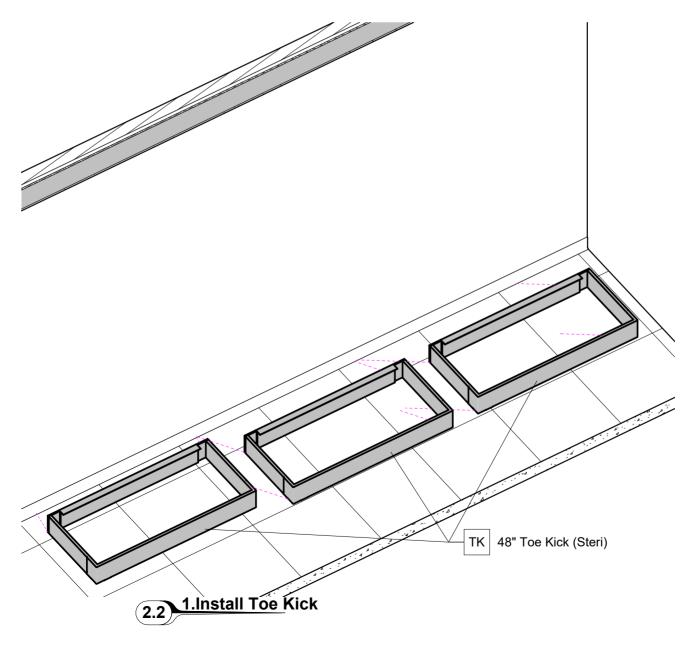


NOVA Solutions Inc.

217-342-7070

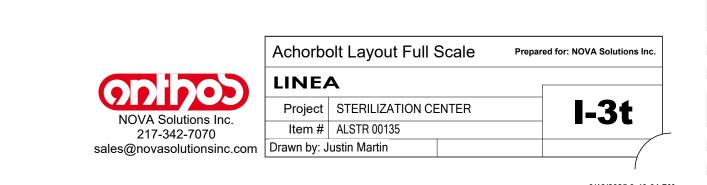


Install - Base Cabinets

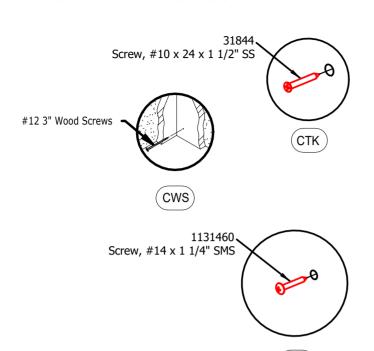


#### **INSTALL BASE CABINET**

- 1. REMOVE ALL DOORS & DRAWERS. DOORS/DRAWERS ARE MATCHING/COORDINATED SETS. **KEEP TRACK OF WHERE EACH WAS REMOVED. DOORS &** DRAWERS MUST BE REINSTALLED IN SAME **CONFIGURATION AT END OF ASSEMBLY.**
- 2. PLACE BASE CABINETS ON TOE KICK AS SHOWN.
- 3. ATTACH BS-3 to BD & BS-2 WITH [DETAIL SSB].
- 4. ATTACH TR, BS-2, BS-3, BD, & BA TO EACH OTHER WITH [DETAIL CCS].
- 5. PLACE TS (upper) CABINET ON TS (lower) CABINET AND ATTACH WITH [DETAIL SSB].
- 6. SECURE ALL BASE CABINETS TO TOE KICK WITH [DETAIL CTK].
- 7. DO FINAL LEVELING PRIOR TO SECURING TO WALL.
- 8. SECURE ALL BASE CABINETS TO WALL WITH [DETAIL CWS].

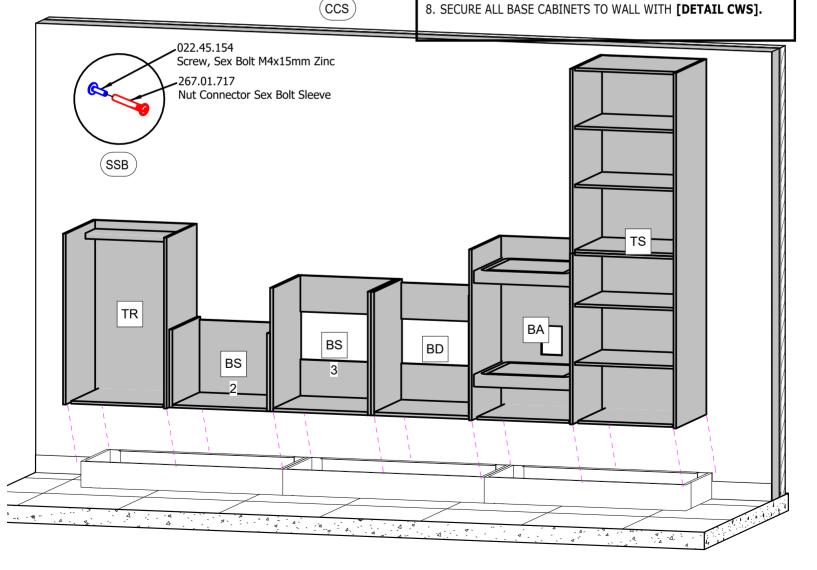


Install - Upper Cabinets

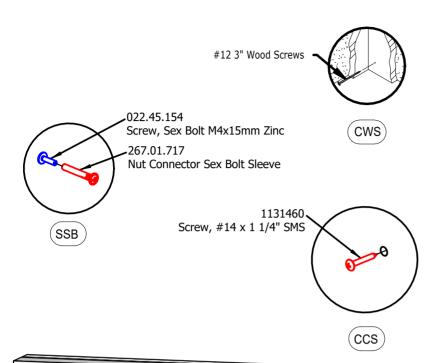

#### **INSTALL UPPER CABINETS**

- 1. Place WC-5 upper cabinet as shown Attach to TS (4) [DETAIL CCS] & Attach to wall with (4) [DETAIL CWS].
- 2. Place the remaining WC & WD cabinet as shown.
  Attach each with (4) [DETAIL SSB] & Attach to wall with (4) [DETAIL CWS].

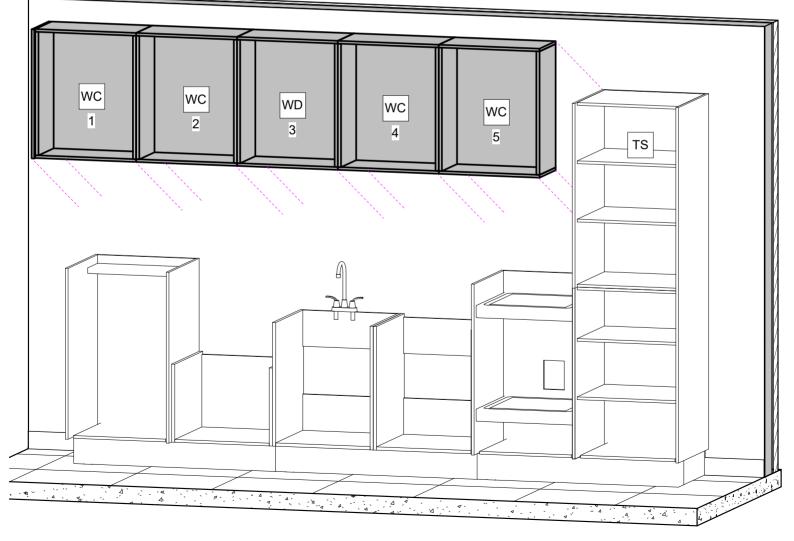


NOVA Solutions Inc.

217-342-7070




### Install - Countertop & Hardware

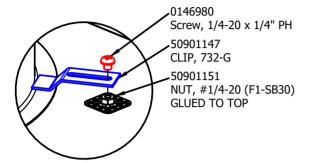

#### **INSTALL COUNTERTOP TO SINK BASE CABINET**

- Install Sink, Faucet, Strainer (loose) to countertop.
   \*\*Apply provided silicone to the <u>sink</u> prior to installing\*\*
- Place Countertop on sink base cabinet.
   \*\*Apply provided silicone to secure work surface to base cabinet\*\*
- Place Backsplash on countertop.
   \*\*Apply provided silicone to secure <u>backsplash</u> to wall and/or countertop\*\*
- 4. Place Trash Countertop(s) on Trash base cabinet.
  \*\*Apply provided silicone to secure work surface to base cabinet\*\*

\*\*NOTE: FINAL ELECTRICAL & PLUMBING CONNECTIONS BY OTHERS\*\*

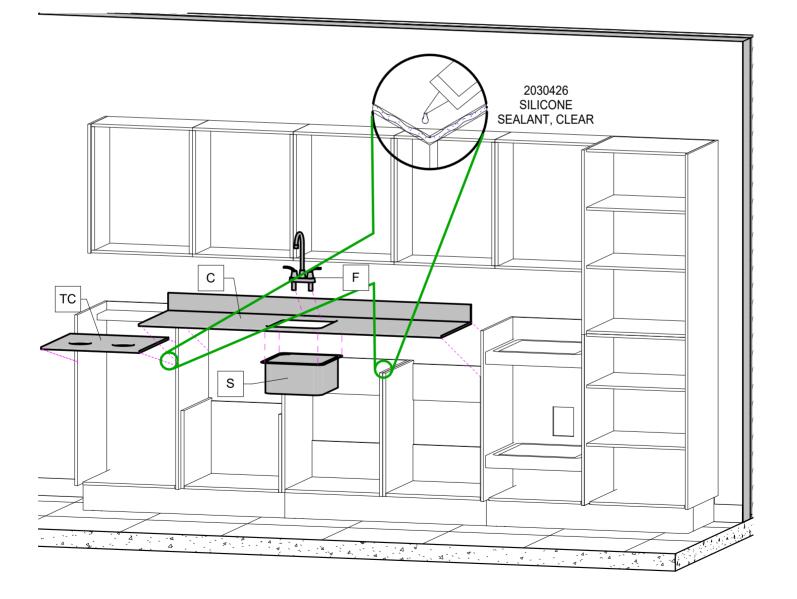




Install - Final Assembly

# \*\*NOTE: FINAL ELECTRICAL & PLUMBING CONNECTIONS BY OTHERS\*\*

- 1. REINSTALL DOORS/DRAWERS IN ORIGINAL POSITIONS FROM WHERE THEY WERE REMOVED.
- 2. Attach Door/Drawer Pulls and remaining components as needed.
- 3. ADJUST TOE-KICK LEVELERS AND TIGHTEN ANCHOR NUTS.
- 4. CHECK FOR ALIGNMENT OF DOORS & DRAWERS, FINAL ADJUSTMENTS MAY BE NECCESSARY.

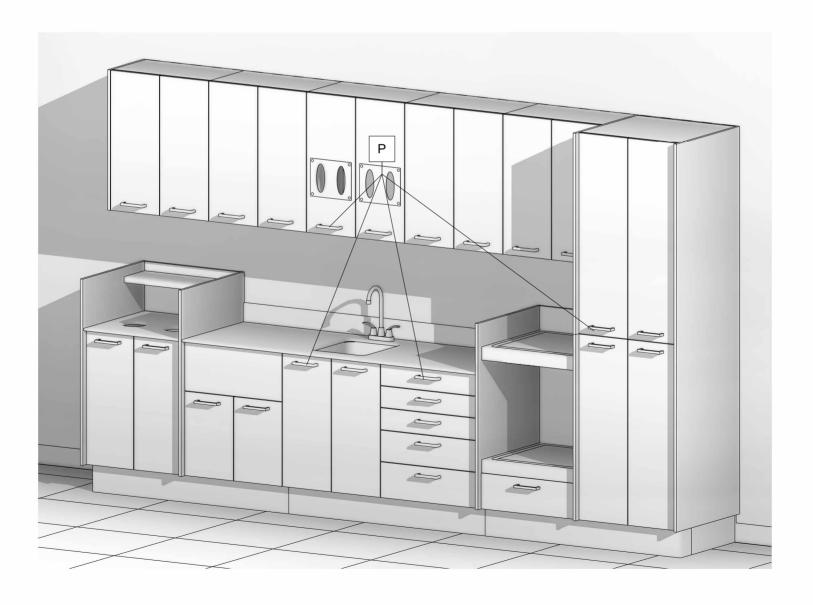

NOVA Solutions Inc.

217-342-7070