



| Backers | | | | | |
|-------------|---------------|--|--|--|--|
| Description | Length | | | | |
| 2x6 Backer | 2' - 4 7/32" | | | | |
| 2x6 Backer | 2' - 4 7/32" | | | | |
| | 4' - 8 13/32" | | | | |


| Plumbing Utilities | | | |
|--------------------|-------------------|-----|--|
| Mark | Description | Qty | |
| Н | Hot Water Supply | 1 | |
| С | Cold Water Supply | 1 | |
| D | Sanitary DWV | 1 | |




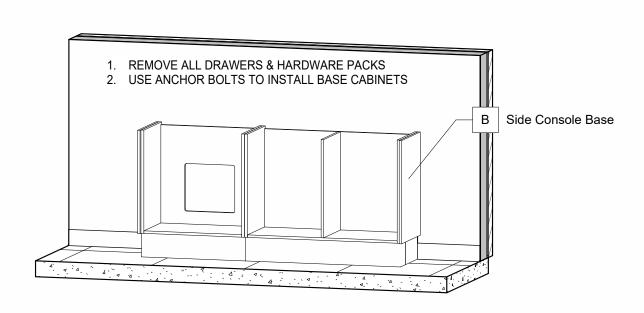


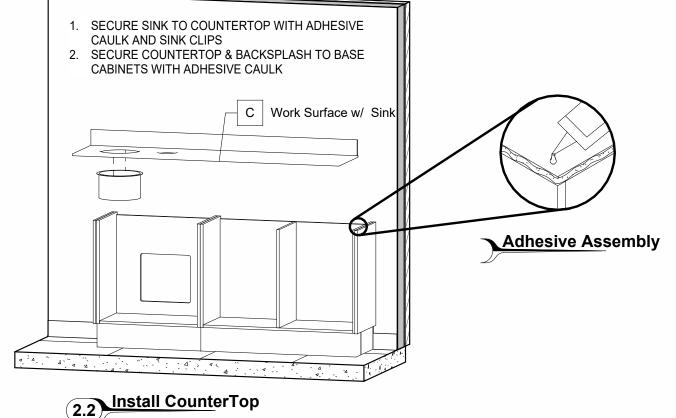

| Packing List | | | | | |
|--------------|-----------------------|-----|--|--|--|
| Mark | Description | Qty | | | |
| | #12 3" Wood Screws | 4 | | | |
| | Anchor Bolts | 8 | | | |
| | Sink | 1 | | | |
| | Strainer | 1 | | | |
| | Tube of Caulk | 1 | | | |
| В | Side Console Base | 1 | | | |
| С | Work Surface w/ Sink | 1 | | | |
| F | Faucet | 1 | | | |
| P1 | Door/Drawer Pull | 12 | | | |
| S | Soap Dispenser | 1 | | | |
| U | Upper Storage Cabinet | 1 | | | |

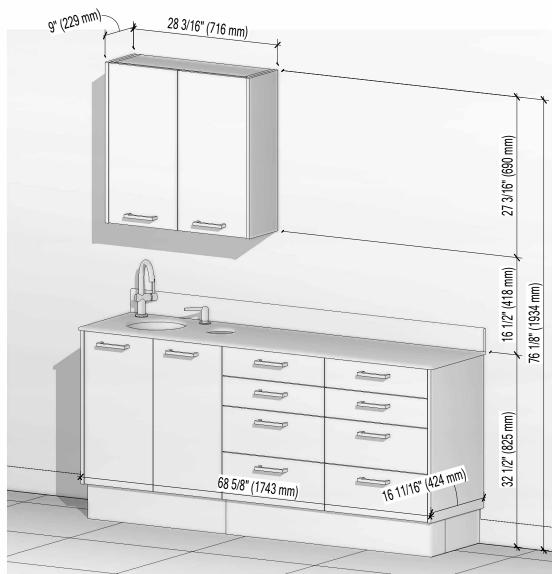

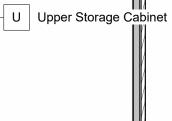


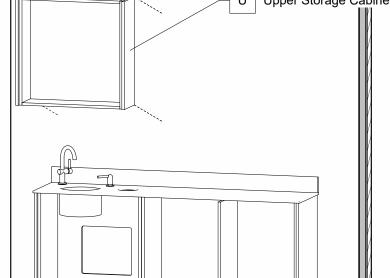

2.1 Install Base Cabinets

REMOVE DOORS SECURE UPPER CABINETS TO WALL WITH #12 3" SCREWS

2.3 Install Upper Cabinets

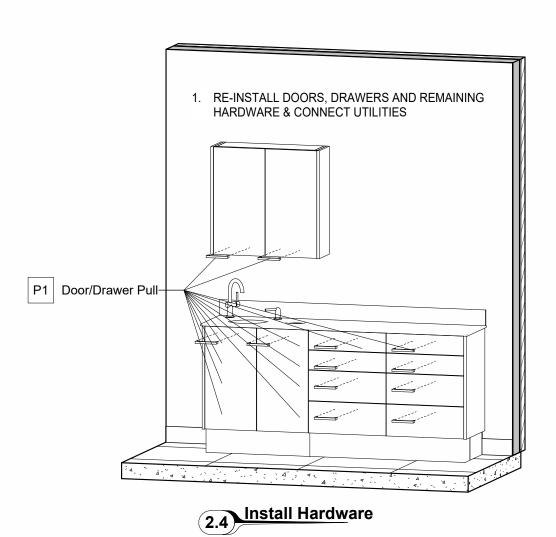

Final Installation View



| | Installation Drawing | | | Prepared for: Nova Solutions Inc | |
|---|----------------------------------|-----------------------|----------|----------------------------------|--------|
| | LINEA | | | | |
| | Project | SIDE TREATMENT CENTER | | | I-1 |
| | Item # | ALSTC 03K-000-U32 | | | • • |
| m | Drawn by: Justin Martin 09/18/24 | | 09/18/24 | | Rev: 1 |
| | | | | | 1 |