



2.4 Install Hardware

P1 Door/Drawer Pull-

REMOVE ALL DRAWERS & HARDWARE PACKS
USE ANCHOR BOLTS TO INSTALL BASE CABINETS

2.1 Install Base Cabinets

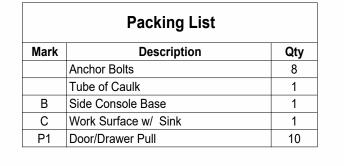

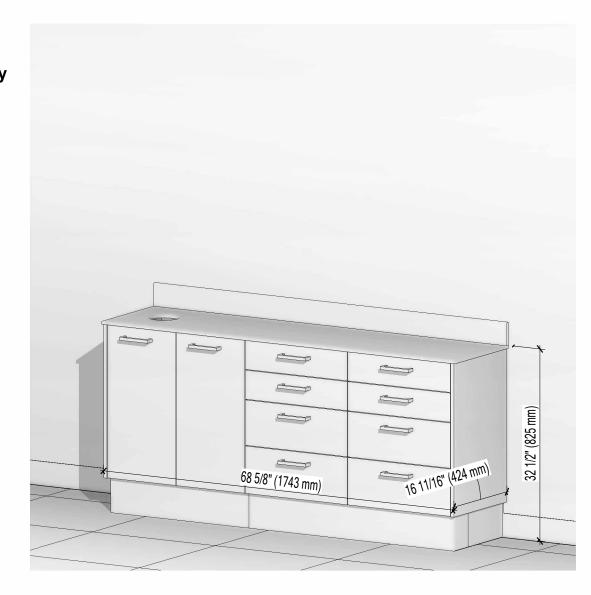

Final Installation View



	Installation Drawing			Prepared for: Nova Solutions Inc	
9	LINEA				
	Project	SIDE TREATMENT CENTER			l-1
	Item #	ALSTC 03M-000-	U00		
.com	Drawn by: Justin Martin		09/27/24		Rev: 1