



1 <u>Utilities Location</u>

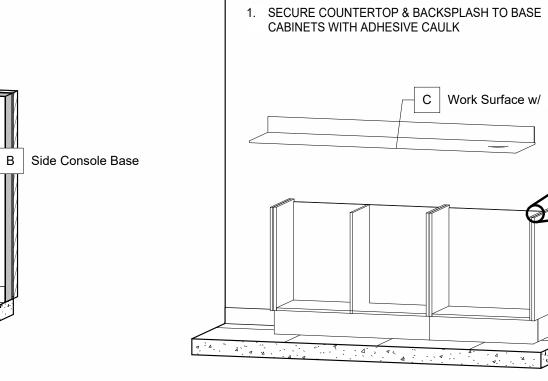



2.1 Install Base Cabinets

REMOVE ALL DRAWERS & HARDWARE PACKS
USE ANCHOR BOLTS TO INSTALL BASE CABINETS

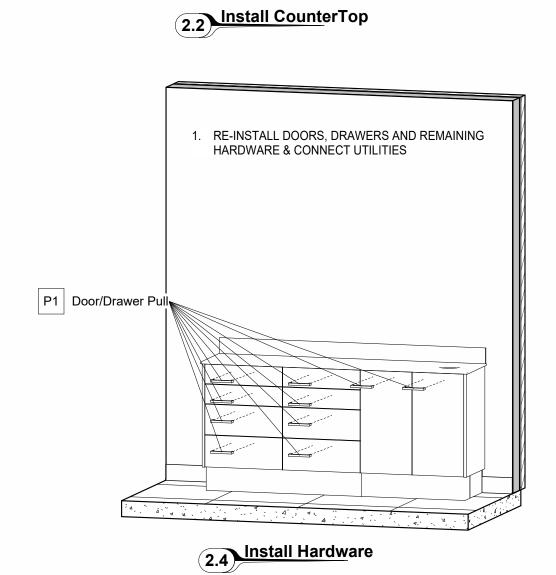

C | Work Surface w/ Sink

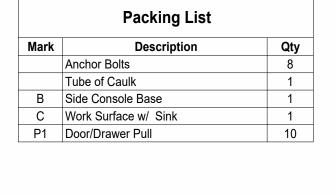

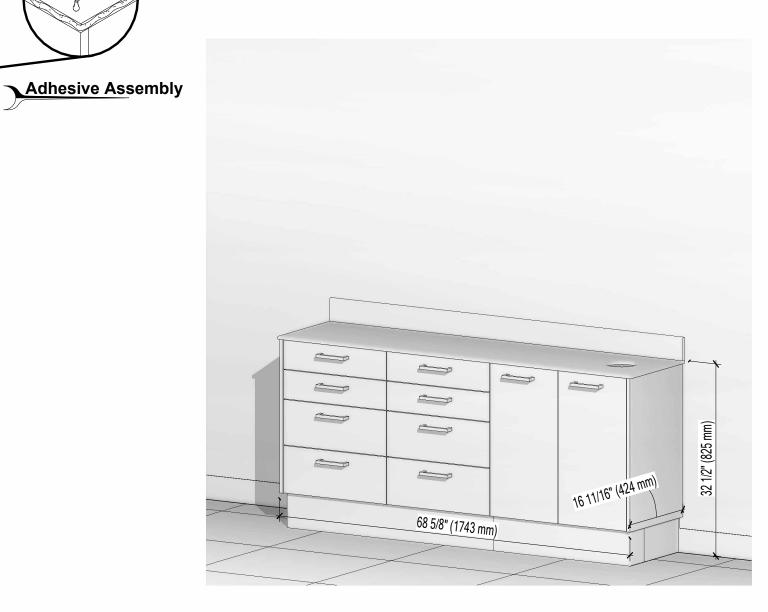

Final Installation View



	Installation Drawing			Prepared for: Nova Solutions Inc.	
	LINEA				
	Project	SIDE TREATMENT CENTER			I_1
	Item #	ALSTC 03N-000-U00			
om	Drawn by: Justin Martin		09/28/24		Rev: 1